


1 Preparing the Subfloor

Ensure that the subfloor is hard, level and stable. Artificial grass tiles should preferably be installed on concrete, roofing membranes or another smooth, solid surface. Make sure the subfloor is dry, clean and free from dust before starting the installation.

2 Laying the Tiles

- Measure the area carefully.
- Start from a straight edge.
- Allow for expansion and contraction caused by temperature changes and weather conditions.
- Do not lay the artificial grass tiles too tightly against walls, edges or fixed structures.

Recommendation: Installing the tiles in a staggered (brick-bond) pattern provides the best and most stable installation.

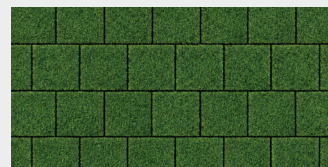



3 Cutting the Tiles

Use a straightedge or ruler to accurately mark the cutting line. Wet the blade of the knife to achieve a clean cut. Straight cuts can be made using a handsaw, jigsaw or utility knife. For cutting shapes and patterns, a jigsaw is recommended. Do not use an angle grinder, mitre saw or table saw.

4 Maintaining Proper Drainage

The artificial grass tiles are water-permeable. Ensure that water can drain freely underneath the tiles. Standing water does not damage the rubber itself, but it may affect the durability of the adhesive bond.


Recommendation: Do not block drainage channels or pathways when applying adhesive.

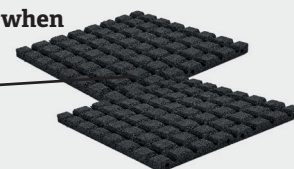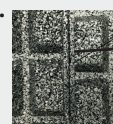

5 Installation > Connecting Pins

Artificial grass tiles are supplied with a pin-and-hole connection system, allowing adjacent tiles to be connected using four plastic connecting pins.

- Place the first artificial grass tile on the prepared surface. Make sure it lies firmly and evenly.
- Position the second tile next to the first, aligning the connecting pins with the holes in the first tile. Ensure that the tiles are properly aligned before proceeding.
- Using a rubber mallet, gently tap the side of the tile near the connecting pins. Make sure the pins are fully inserted into the holes of the first tile. Repeat this process for the remaining tiles.

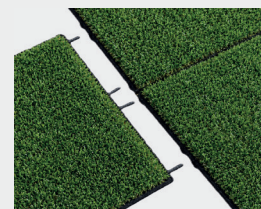

6 Installation > Adhesive Bonding

Only apply adhesive under dry conditions. Both the artificial grass tiles and the subfloor must be dry, and the subfloor must be free from dust.

- The installation temperature must be at least 8°C.
- Bond all tiles together along the joints.
- Apply adhesive to the subfloor, preferably along the positions of the ribs on the underside of the tiles.
- The spacing between the adhesive beads must not exceed 8 cm.
- Apply the adhesive in the direction of the drainage channel or along the slope of the surface.



Please note: There is an arrow on the underside of each artificial grass tile indicating the laying direction. Lay all tiles with the arrows pointing in the same direction to ensure that the grass fibres are aligned, creating a uniform and seamless appearance.

