


Aslon® Sprintrack

1 Preparing the subfloor

Ensure that the surface on which the sprintrack will be installed is completely level, clean and dry. Use a vacuum cleaner or a stiff broom to remove dust, dirt and loose particles. Uneven surfaces may affect the final result, so check that the floor is level. If necessary, fill or level out any minor irregularities.

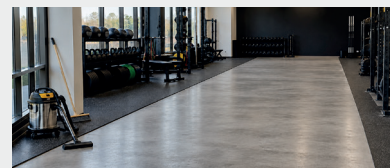

2 Unrolling the sprintrack

Slowly and carefully unroll the sprintrack onto the prepared surface. Leave the sprintrack completely unrolled for 24 hours to allow the material to acclimatise and any creases or curled edges to flatten out. Weights may be used if necessary.

3 (Optional) Installing an Underlay

For additional comfort during exercise or to raise the floor level, an underlay can be installed before laying the sprintrack. This additional layer consists of rubber or foam. Please refer to our product range for suitable options.

Secure the underlay to the subfloor using strong double-sided tape or a two-component polyurethane adhesive. Ensure that the underlay fits tightly, without any gaps or wrinkles. Cut the underlay to size where necessary.



Aslon® ShockpadFOAM



Aslon® ShockpadRUBBER

Please note: Apply the adhesive evenly and avoid using excessive amounts. Excess adhesive may seep through the small openings in the backing of the sprintrack and become visible on the surface.

4 Securing the sprintrack

Roll back one end of the sprintrack to approximately halfway along its length. Apply the double-sided tape or spread the adhesive evenly over the subfloor or underlay. Repeat this process later with the other end of the sprintrack.



5 Applying tape or adhesive

Use strong double-sided tape or a two-component polyurethane adhesive suitable for sports flooring. Apply the tape or adhesive to the level subfloor or underlay. Carefully roll the previously rolled-back half of the sprintrack over the area where the tape or adhesive has been applied. Proceed slowly to prevent wrinkles or creases. Press the sprintrack down evenly onto the surface. Repeat this process for the other half of the sprintrack.



6 Finishing and Cleaning

Once the entire sprintrack has been installed and securely fixed in place, check the edges and seams once more. Remove any excess adhesive residue and clean the surface using a damp cloth and a vacuum cleaner.